


Operating Instructions

DC 1602R

Five-channel Remote

DC 1602T

Five-channel Remote w\Light

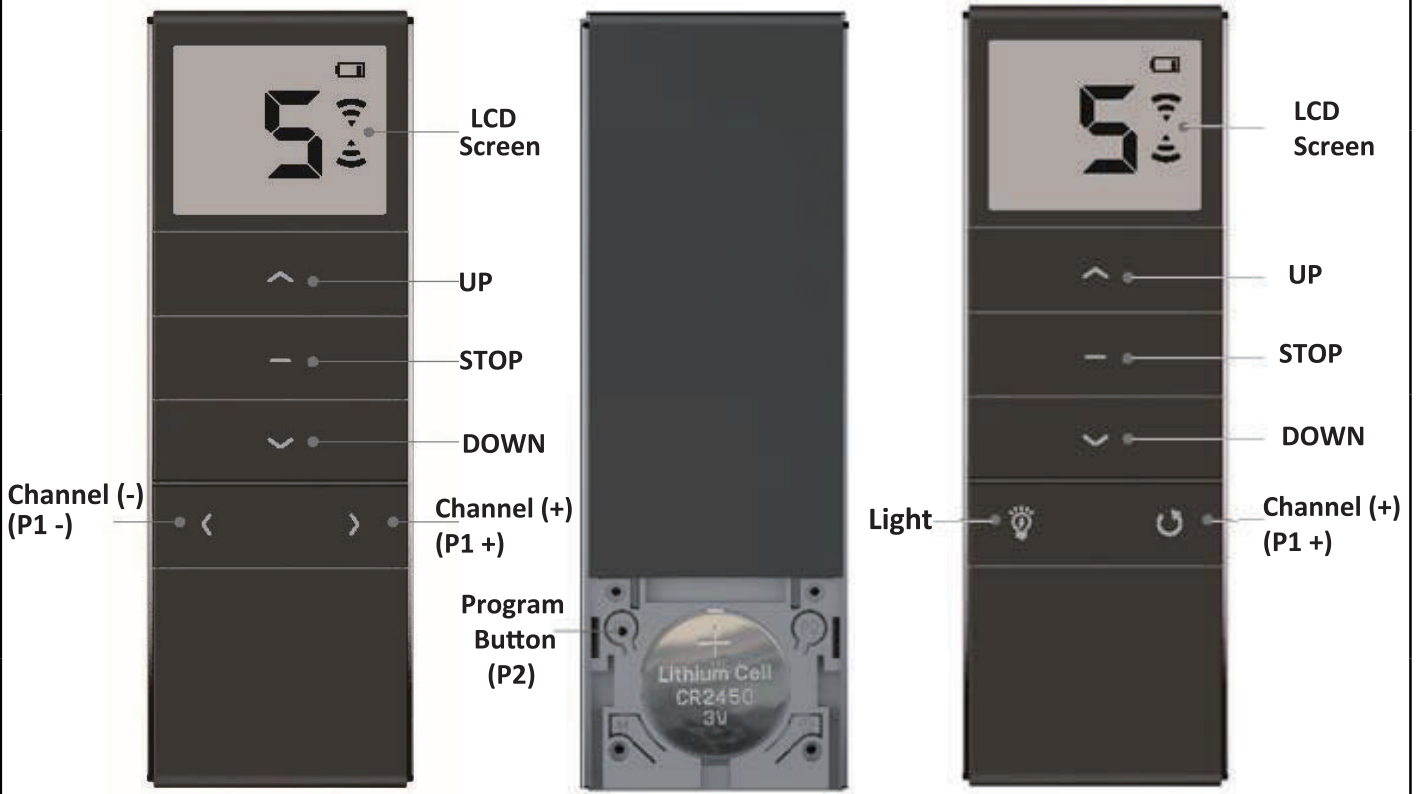

Technical Specifications:


Battery: 3V (CR2450)	Battery Life: > 2 years	Radio Frequency: 433MHz
Working Temperature: 10°C – 50°C	Radio range: 200 meters outdoor, 35 meters indoors	

Warning:

1. Exposure to moisture or sudden impact may cause damage or reduce the effectiveness of the remote.
2. If battery level is below 2.6V, there will be a low voltage indicator appear on the screen.
3. Failure to transmit a strong signal may be the result of a weak battery and time to replace the battery.
4. Do not use a different battery other than the manufactures recommended (CR2450 Lithium Cell 3V).
5. Dispose of used batteries properly thru authorized electrical recycling facilities.

To close extra channels

Press & Hold P1+ then P1-(light), a "C" will appear, when a "5" appears release both buttons.

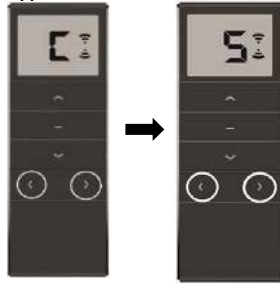

Press P1+ or P1-(light) to select the number of channels you need.



Press STOP x 1 time



Extra Channels are closed

→ To re-open the channels simply repeat process

Pairing to motor

Press P2 x 2 times



Press the UP or DOWN button x 1



or



Pairing is complete.

Pairing additional remote

Press P2 x 2 times



Press P2 x 1 time



Pairing is complete.

A (original remote)

B (additional remote)

Deleting Additional Remote

Press P2 x 1 time



Press STOP x 1 time



Press P2 x 1 time



Remote is deleted.

B

B

B

For Jog-mode setting

Press P2 x 1



Press UP x 1 time



Press P2 x 1 time



Jog-move is complete.

P2

P2