

# Drop Shade

## Programming the Remote Control

Note: Drop Shade should be closed before programming.

**Step 1.** Connect the motor power cord to wall/electrical outlet.

**Step 2.** Press the **P2** button twice on the back of the remote control. (listen for beep)

**Step 3.** Press and hold the **Down** button on the front of the remote control until the beeping stops. (listen for beep)

Programming is completed. To open the Drop Shade, simply push the **Down** button and to close simply push the **Up** button.


## Adjusting the Motor Settings

Viewed facing the motor end

### If fabric rolls down over the left side

To adjust the **UP** position turn the **WHITE** key. First, fully close the shade.

- To raise the **UP** position – turn the key counter-clockwise.
- To lower the **UP** position – turn the key clockwise.

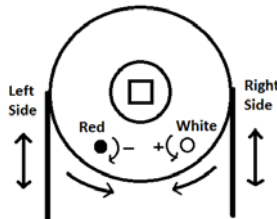

### If fabric rolls down over the right side

To adjust the **UP** position turn the **RED** key. First, fully close the shade.

- To raise the **UP** position – turn the key counter-clockwise.
- To lower the **UP** position – turn the key clockwise.

To adjust the **DOWN** position turn the **RED** key. First, fully open the shade.

- To lower the **DOWN** position – turn the key counter-clockwise.
- To raise the **DOWN** position – turn the key clockwise.

To adjust the **DOWN** position turn the **WHITE** key. First, fully open the shade.

- To lower the **DOWN** position – turn the key counter-clockwise.
- To raise the **DOWN** position – turn the key clockwise.

Open or close the shade partially then reclose or reopen to test the new position. It may be necessary to continue adjusting to reach the desired position.